



Parts manual


RINK – Topdresser

Model GS1005, 1005A, 1010

Applies to:

A133.100.500 RINK - Topdresser 1005

A133.101.000 RINK - Topdresser 1010

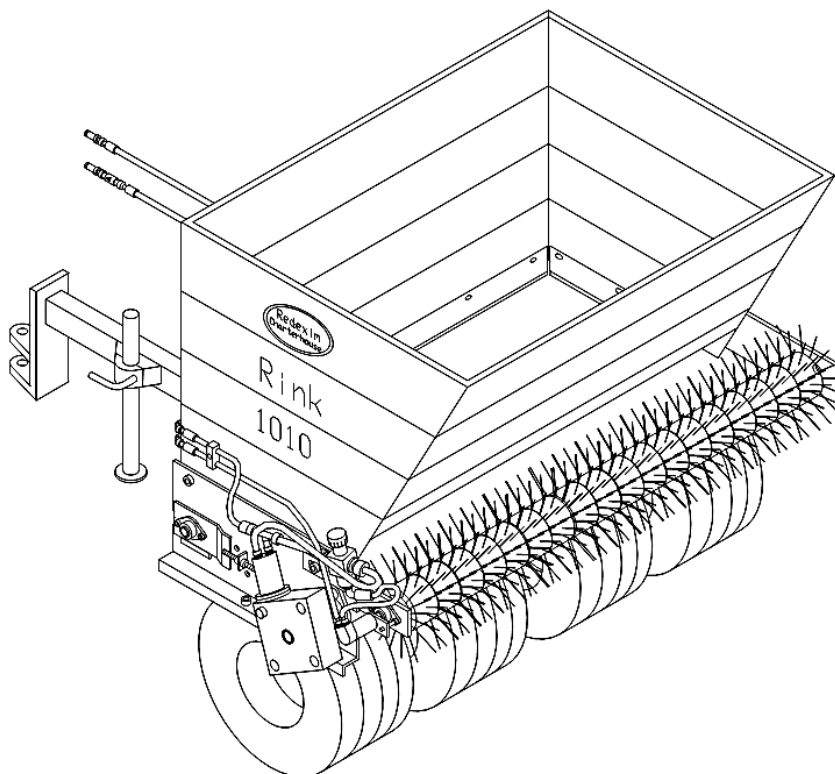

RINK Spezialmaschinen GmbH, D-88279 Amtzell
Phone 07520/95690 **Telefax 07520/956940**
www.rink-spezial.de **info@rink-spezial.de**

SPARE PARTS

RINK Topdresser GS1005, 1005A, 1010

Address for ordering spare parts

Rink Spezialmaschinen GmbH
Alfons-Stübe-Weg 4
D-88279 Amtzell

Phone: (07520) 95690
Fax: (07520) 956940
Email: info@rink-spezial.de

Spare parts order

To ensure that your spare parts order can be processed quickly, please include the following information with every order:

- Chassis or identification number
- Year of manufacture (if available)
- Part number from the relevant spare parts list
- Description
- Order number

Order example: 529413 2012 14 Spreading roller, complete RGS 10162

	/	/		\	\
Chassis no.	Year of manufacture	Parts no.	Description	Order no.	

RINK Topdresser GS1005, 1005A, 1010 complete

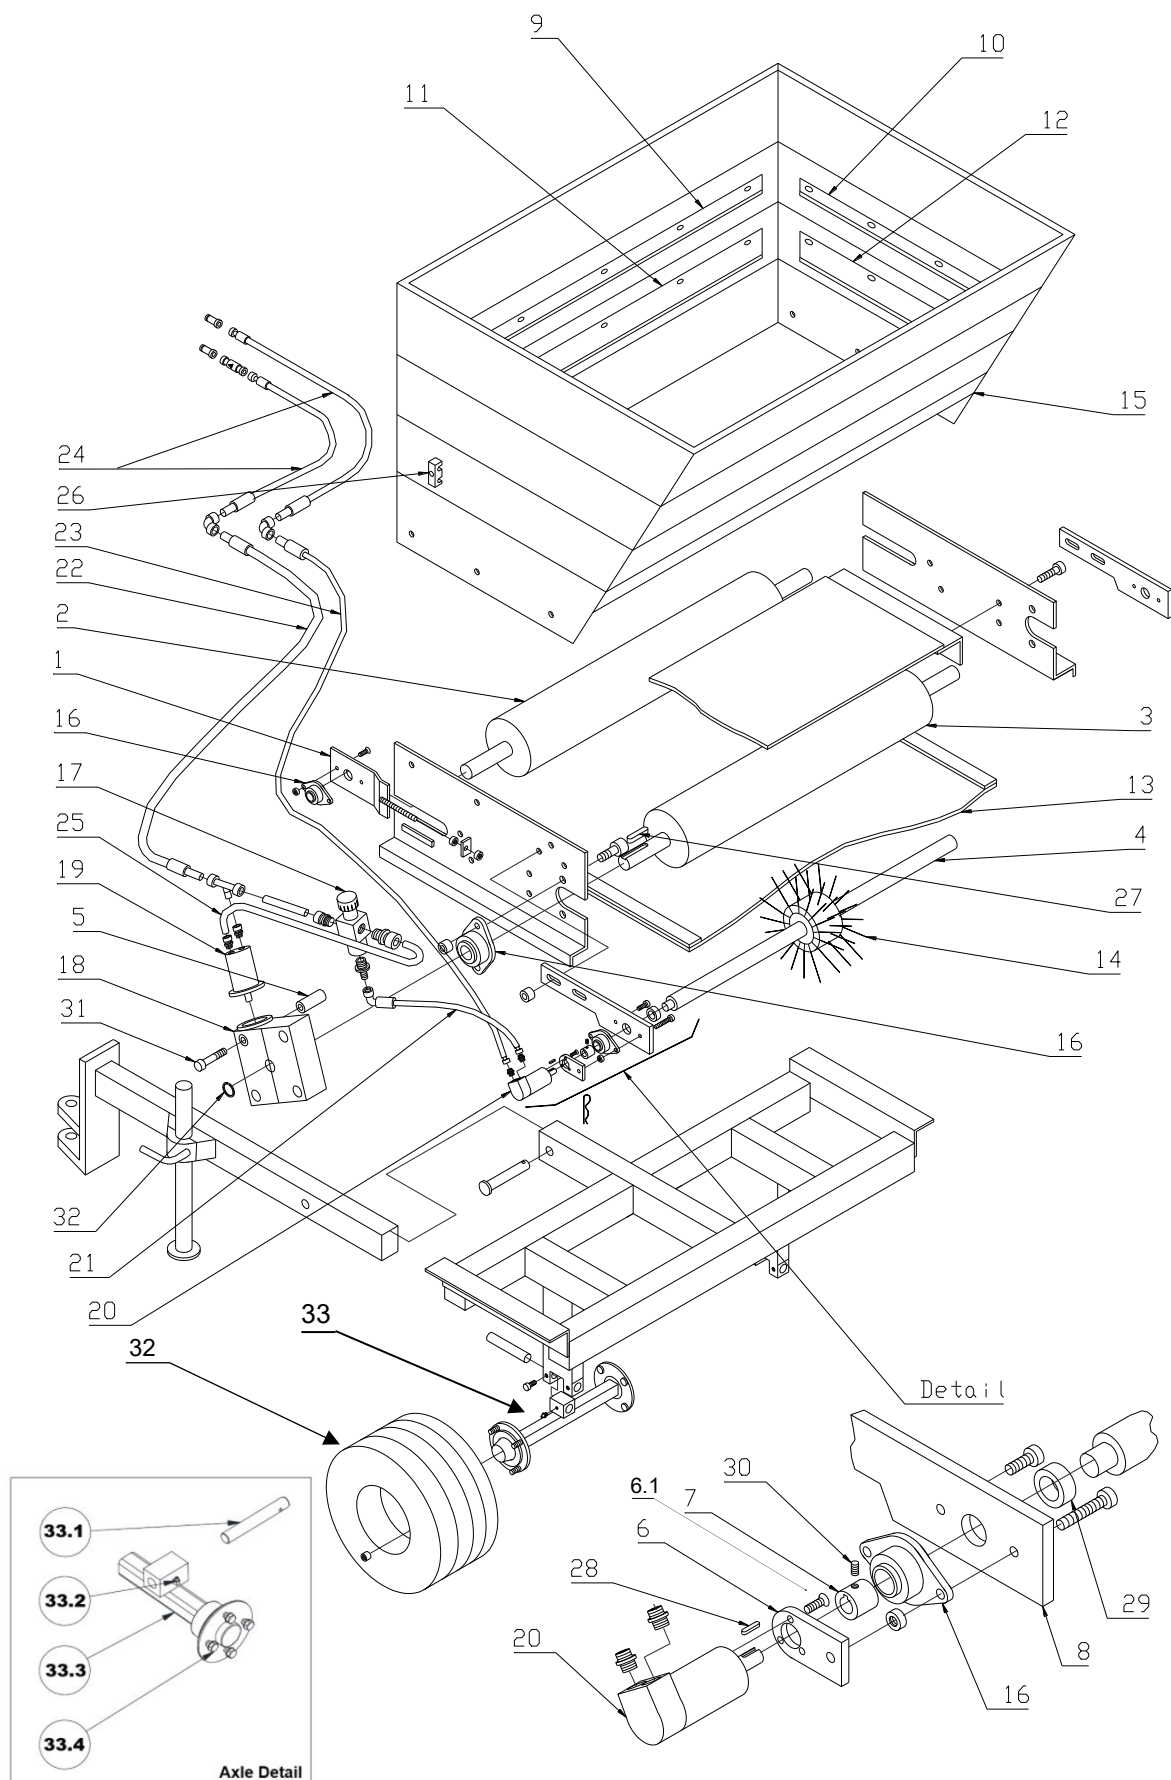


Fig. 1: Topdresser GS1005, 1005A, 1010 complete

Spare parts list RINK Topdresser GS1005, 1005A, 1010 complete

Part	Order no.	Description	Comment
1	RGS 16112	Clamping device	
2	RGS 16129	Front transport roller	
3	RGS 16127	Rear transport roller	Rubberized
4	RGS 17956	Brush shaft Ø30 mm complete with connecting sleeve	For connecting sleeve separately, see item 7
5	RGS 16161	Torque support Belt drive	
6	RGS 16157	Torque support Brush	
6.1	RGS 10482	Countersunk screw M6 x 16	
7	RGS 16160	Connecting sleeve	
8	RGS 16115	Brush roller holder	
9	RGS 18013	Aluminum strip, front funnel	
10	RGS 18012	Aluminum strip, side funnel	
11	RGS 10573	Front rubber scraper	
12	RGS 10407	Side rubber strip	
13	RGS 10524	Conveyor belt	
14	RGS 10162	Spreading roller, complete	
15	RGS 10529	Filling funnel	Aluminum
16	RGS 11001	Flange bearing 30 mm	See maintenance instructions
17	RGS 10335	Flow regulator 12 l	
18	RGS 10492	Belt roller gearbox	See maintenance instructions
18-1	RGS 5073	Gearbox vent screw	
19	RGS 10572	Hydraulic motor, belt roller	
20	RGS 10473	Hydraulic motor brush roller	
21	RGS 10673	Hydraulic hose 10 x 280	
22	RGS 10672	Hydraulic hose 10 x 400	
23	RGS 10671	Hydraulic hose 10 x 750	
24	RGS 10667	Hydraulic hose 10 x 2800	
25	RGS 11447	Pipe bend	Pipe 12 x 1 mm
26	RGS 10348	Hose clamp	
27	RGS 10100	Key 8 x 7 x 20	
28	RGS 10487	Key 5 x 5 x 16	
29	RGS 10605	Clamping sleeve 8 x 30	
30	RGS 10430	Threaded pin M8 x 6	
31	RGS 10600	Screw M10 x 100	
	RGS 11002	Retaining ring 30 x 1.5	
32	RGS 10525	Tires Slick 18 x 9.50-8	
33.1	RGS 16137	Bolts	
33.2	RGS 10628	Grease nipple M8 H3	
33.3	RGS 16138	Running axle 360 mm track width	
33.4	RGS 10697	Wheel bolt M12 x 1.5	

External oil supply

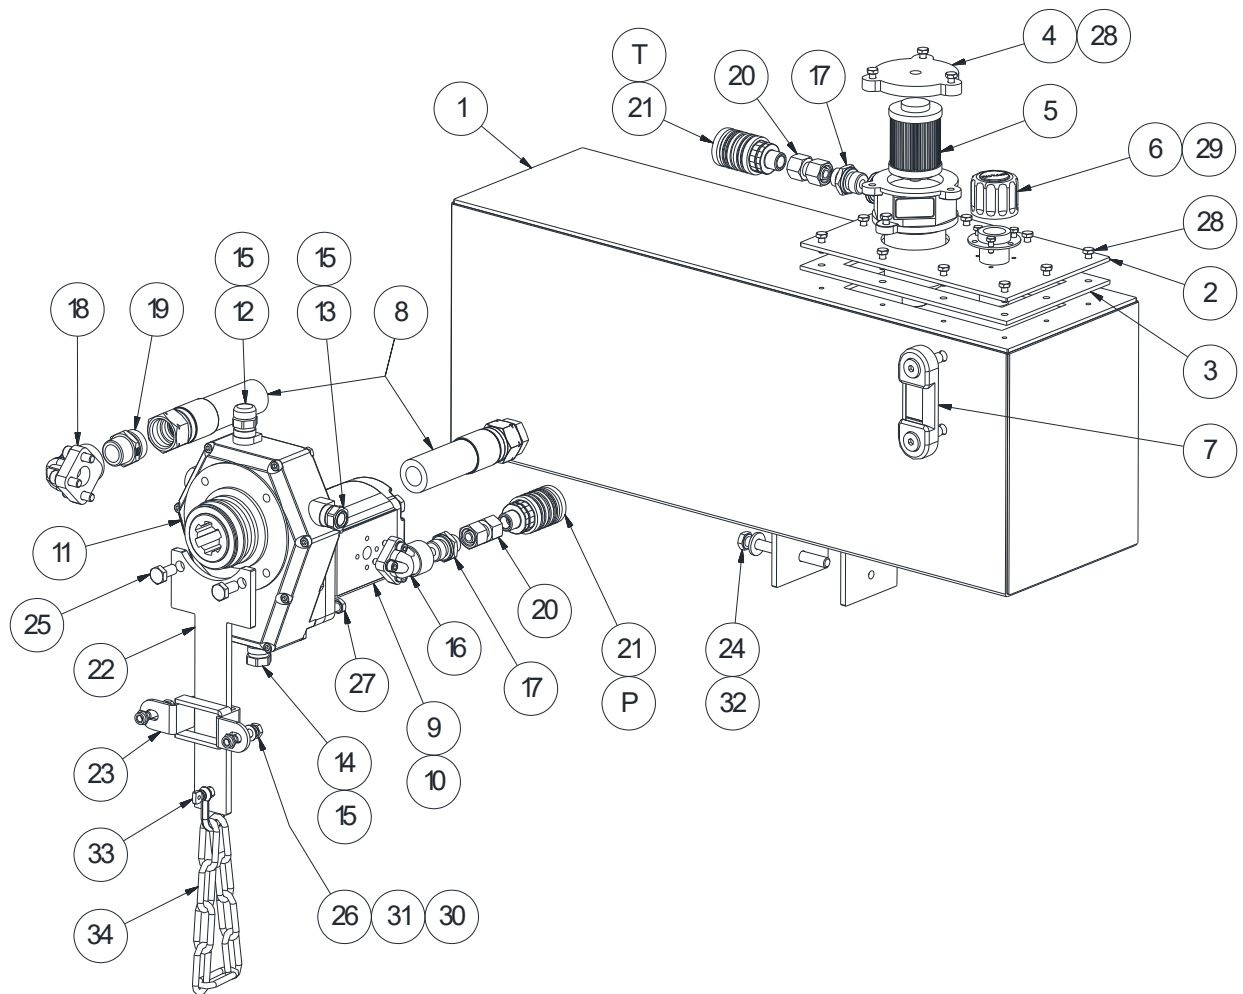


Fig. 2: External oil supply

Spare parts list External oil supply

Part	Order number	Description	Comment	Quantity
1	RGS 16077	Tank		1
2	RGS 16059	Screw cap		1
3	RGS 11198	Tank cap seal		1
4	RGS 10841	Return filter		1
5	RGS 10722	Filter insert		1
6	RGS 10840	Filling and ventilation filter		1
7	RGS 10842	Oil level indicator		1
8	RGS 5018	Suction hose		1
9	RGS 5025	Pump		1
10	RGS 5026	Coupling sleeve and wedge		1
11	RGS 5020	Gearbox		1
12	RGS 10859	Vent screw		1
13	RGS 10858	Sight glass		1
14	RGS 10780	Drain plug		1
15	RGS 10779	Seal		3
16	RGS 5004	Pump flange		1
17	RGS 10662	Screw-in fitting		2
18	RGS 5021	Pump flange		1
19	RGS 5022	Screw-in fitting		1
20	RGS 10040	Straight connection		2
21	RGS 10744	HD socket		2
22	RGS 10390	Pump holder		1
23	RGS 11023	Pocket		1
24	RGS 10600	Hexagon screw M10 x 100		1
25	RGS 10148	Hexagon screw M10 x 20		2
26	RGS 10636	Hexagon screw M8 x 30		2
27	RGS 10146	Hexagon screw M8 x 20		4
28	RGS 10159	Hexagon screw M6 x 16		12
29	RGS 10147	Hexagon screw M5 x 12		3
30	RGS 10759	Hex nut M8		2
31	RGS 10550	Washer		2
32	RGS 10054	Clamping disc		1
33	RGS 11021	Shackle M8		1
34	RGS 10484	Chain		1